

## Instruction for 30 x 60 Party Canopy

1. Stretch canopy over area to be covered keeping the edges taunt and straight (see fig. 1)
2. Drive stakes – approx. 5 feet from edge of tent
3. Tie ropes around stakes using a clove hitch knot
4. Insert the pins of the side poles through the grommets & rings, with the butt end of the side pole under the canopy, around the perimeter of the tents and erect side pole at about 60 degrees. Adjust tension on stakes, so ropes have some slack. You should be able to tell where they were tied before.
5. Put center poles together, insert poles through center ring
6. Starting on an end pole, push pole to an upright position, being carefully that the fabric doesn't get caught on the pin. You don't have to go all the way up, with pole just far enough that pole doesn't slide out.
7. When you have all center poles up, try and straighten the poles the best you can.
8. Starting at the corners, erect side poles to a complete vertical position, It should be all one person can do to stand the corner pole up straight, adjust ropes as needed, go all the way around tent adjusting ropes & side poles.
9. Secure rope attached to the center position by wrapping around pole and tying off. It needs to be tight, so the tent material can't lift off pole in a wind.
10. Sidewalls may be attached to the rope around the inside perimeter of the canopy, have sidewall positioned between the side pole and the stake.

