

NEVER CARRY THE FOUNTAIN BY THE FIGURINE OR TULIP

REGARDING FOUNTAINS: Beverage fountains are designed to circulate clear liquid free of pulp, seeds, fruit, rinds, sherbet, etc. When it is running, there must be a supply of liquid in it. Do **NOT** run the fountain dry.

OPERATING INSTRUCTIONS

- Pour beverage into lower reservoir until half full and turn the switch to “on”.
- After the liquid is circulating, fill the bottom reservoir to the desired level.
- If the liquid does not circulate within 1 minute, turn the fountain off for 10 seconds. Repeat this process several times until the beverage flows freely. If this fails turn the switch to “on”, and pour some of the beverage into the second reservoir until the beverage begins to flow.
- If no liquid is flowing from a spigot place your finger over the dry spigot for a few seconds.
- The fountain has to be on a level surface.
- Do not use lightweight lamp extension cords, if necessary, use at least 16 gauge grounded extension cord no longer than 25 feet.
- Plug into a grounded outlet only.
- Do not use an adapter that converts three prongs to two.

MOST IMPORTANTLY: TURN THE MACHINE **ON**

CLEANING INSTRUCTIONS

- Empty the fountain and rinse with warm water until it runs clear.
- **Do not dismantle the fountain under any circumstances.**