

Cotton Candy Machine

Setup Instructions

1. Place machines base on a steady surface.
2. Completely loosen the shipping knobs on either side of the floss machine before operating.
3. Center aluminum or plastic collection pan around floss head. Gently press pan down to properly seat and secure.
4. Place the plastic dome on top of the collection pan. Orient the opening of the dome to correspond with the control switches.

Operating Instructions

1. Plug floss machine into a grounded three prong outlet (Machine must be grounded)
2. Pour floss sugar into the hole at the top of the floss head. Fill to 1" from the top edge. Spread sugar out evenly inside the floss head.
3. Turn on main power and heat switch. Adjust heat dial to high. Cotton candy will now begin to spin from the machine.
4. If the machine begins to smoke adjust the heat setting dial. When you find a suitable temperature, maintain that adjustment.
5. Run the machine until ALL of the sugar has been spun from the head. Sugar left in the head will clog and burn.
6. **DO NOT USE WATER ON THE FLOSS HEAD FOR ANY REASON.**
7. Attached to the top plate of the spinner head are two leather floaters, these give additional air current to control the floss being spun. By twisting the leading edge of the floaters down, the floss produced will float up. If you twist the leading edge of the floaters up, the floss produced will go down.
8. If the cotton candy will not stick to the cones, wipe the cones with a damp sponge.