

Popcorn Machine Instructions

Controls and Their Functions:

There are three switches on the popper.

Light and Warmer Switch

- Turns on the heat to the bottom corn pan and heat light.

Kettle Motor Switch

- Turns on the motor which drives kettle agitator shaft.

Kettle Heat Switch

- Turns on the heat element.

Popping Instructions:

1. Turn kettle heat and kettle motor switch on.
2. Load kettle with pre-measured popcorn.
3. When corn has popped, dump kettle.
4. Repeat cycle when necessary

Care and Cleaning:

Each time you finish a series of poppings, wipe the outside of the kettle with a soft cloth to remove any oil drippage on the outside of the kettle. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.

Cleaning the cabinet of your machine is easy. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also. NOTE: Never use a glass or plastic cleaner that contains ammonia. It will crack the plastic on the machine.