




Nacho Cheese Can Warmer Instructions

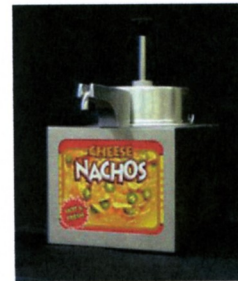

OPERATING INSTRUCTIONS

Follow these simple steps for setting up the warmer, using stainless steel bowl.

1. Place bowl lifter spring in black water bowl and fill water bowl with one quart of hot water.
2. Turn warmer on.
3. On pump model, PRE-HEAT cheese before inserting pump. Pump will NOT function if cheese is too thick.
4. Place bowl into unit. If using No. 10 tin, open tin and pour contents into stainless steel bowl. Bowl lifter spring should be centered under container.
5. Place lock ring over container, or pump into cheese, press down turning right or left until top locks into unit.
6. BE SURE BOWL LIFTER SPRING IS PLACED INSIDE WATER BOWL BEFORE INSERTING CONTAINER
7. Because the consistency of different foods varies, and because liquids and solids absorb heat at different rates, it is impractical to specify an exact dial setting.
8. However, the letter "V" is in the center of the serving range and at this point the temperature is approximately 145° F. When the dial is set at the letter "N", the temperature is approximately 170° F, the proper holding temperature for foods.
9. Turn the control to extreme left position when not in use.